

Model M51

<i>Function</i>	<i>Format</i>	<i>Address Hex</i>	<i>Data Hex</i>	<i>Address Dec</i>	<i>Data Dec</i>	<i>Comment</i>
Cursor Down	NEC	877C	5F	34684	95	
Cursor Left	NEC	877C	5D	34684	93	
Cursor Right	NEC	877C	5E	34684	94	
Cursor Up	NEC	877C	5C	34684	92	
Dimmer	NEC	860F	AB	34319	171	
Enter	NEC	877C	19	34684	25	
EQ	NEC	860F	A9	34319	169	
Mute	NEC	860F	AD	34319	173	
Polarity	NEC	860F	AA	34319	170	
Power OFF	NEC	860F	A1	34319	161	
Power ON	NEC	860F	A0	34319	160	
Setup	NEC	860F	A8	34319	168	
Source AES	NEC	860F	A2	34319	162	
Source Coaxial	NEC	860F	A4	34319	164	
Source HDMI 1	NEC	860F	A3	34319	163	
Source HDMI 2	NEC	860F	A6	34319	166	
Source Optical	NEC	860F	A7	34319	167	
Source USB	NEC	860F	A5	34319	165	
Volume Down	NEC	860F	AC	34319	172	
Volume Up	NEC	860F	AE	34319	174	